

# MaxiSYS\_Infiniti\_V1.20 Function List

**NOTES:**

- This function is supported.                      ※ This function may be supported, which depends on the actual condition of the vehicle.
- This function is not supported.            ▲ This function is the new feature in this version.

As for special function please refer to the special function table.

Unit	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	WORK SUPPORT	Other
ABS	●	●	●	※	●	●	※	
TCS	●	●	●	●	●	●	●	
IVMS	●	●	●	●	●	●	●	
CVT	●	●	●	○	●	○	●	CAN DIAG SUPPORT MNTR
ASCD	○	●	○	○	●	○	○	
AIR PRESSURE MONITOR	※	●	○	○	●	※	●	
Active SUS	●	●	●	●	●	●	●	
ACT D/SUS	●	●	●	●	●	●		
4WD	●	●	●	※	●	※	●	
SMART ENTRANCE	○	●	●	※	●	※	●	CAN DIAG SUPPORT MNTR
ICC	●	●	●	※	●	●	●	CAN DIAG SUPPORT MNTR
NATS	○	●	●	○	○	○	○	C/U INITIALIZATION SELF FOUNDATION CHECK
Engine	●	●	●	※	●	●	●	
A/T	●	●	●	※	●	※	●	
S/BLIND CAMERA	●	○	○	○	●	○	●	
REARVIEW CAMERA	●	○	○	○	●	○	●	
MOTOR ASSIST	○	●	●	○	●	○	●	
HEAD LAMP LEVELIZER	●	●	●	○	●	●	●	
DIFF LOCK	○	●	●	○	●	○	○	CAN DIAG SUPPORT MNTR
ALL MODE AWD/4WD	○	●	●	○	●	○	○	CAN DIAG SUPPORT MNTR
IPDM	○	●	●	○	●	●		
AIR LEVELIZER	●	●	●	○	●	●	●	
SONAR	●	●	●	○	●	●		
AT	●	●	●	○	●	●	●	CALIBRATION DATA
Airbag	○	●	●	○	○	○	○	READ CODES [PAST] TROUBLE DIAG RECORD ECU DISCRIMINATED NO
PRECRASH SEATBELT	●	●	●	○	●	○	○	CAN DIAG SUPPORT MNTR
MULTI AV	※	●	●	○	●	○	○	

Unit	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	WORK SUPPORT	Other
METER AC AMP	●	●	●	○	●	○	○	CAN DIAG SUPPORT MNTR
METER	○	●	●	○	●	○	○	CAN DIAG SUPPORT MNTR
IPDM E/R	○	●	●	○	●	●	○	CAN DIAG SUPPORT MNTR
INTELLIGENT KEY	●	●	●	○	●	●	●	CAN DIAG SUPPORT MNTR
HICAS	●	●	●	○	●	※		CAN DIAG SUPPORT MNTR
EPS	●	●	●	○	●	○	●	CAN DIAG SUPPORT MNTR
E-4WD	●	●	●	※	●	●		CAN DIAG SUPPORT MNTR
DRIVER POSITION	●	●	●	○	●	●	●	CAN DIAG SUPPORT MNTR
BCM	※	●	●	○	●	●	●	CAN DIAG SUPPORT MNTR
AUTO SLIDE DOOR	●	●	●	○	●	●		CAN DIAG SUPPORT MNTR
AFS	●	●	●	○	●	●	●	CAN DIAG SUPPORT MNTR
HVAC	●	●	●	○	●	●	●	
HYBRID SYSTEM	●	●	●	○	●	●		
LDW	●	●	●	○	●	●		CAN DIAG SUPPORT MNTR
AUTO BACK DOOR	○	●	●	○	●	○	○	
OCCUPANT DETECTION	○	○	○	○	○	●	○	
TOTAL ILLUM C/U	●	○	○	○	●	○	●	
CONVERTIBLE ROOF	●	●	●	○	●	●	●	



## Special\_Function

Index	Special Function Name	Index	Special Function Name
0001	work support	0002	CAN DIAG SUPPORT MNTR
0003	ECU DISCRIMINATED NO	0004	C/U INITIALIZATION
0005	READ CODES [PAST]	0006	SELF FOUNCTION CHECK
0007	CALIBRATION DATA	0008	TROUBLE DIAG RECORD