

## COMPATIBILITY CHART. SYRP GENIE.

The following chart matches the Syrp link cable to your corresponding camera. Please note that if your camera is not listed it may still be compatible, email [syrp@syrp.co.nz](mailto:syrp@syrp.co.nz) for confirmation

Cable type	Compatible camera models
1C	<b>Canon</b> EOS 1000D   EOS 100D   EOS 1100D   EOS 300D   EOS 350D   EOS 400D   EOS 450D   Canon EOS 500D   EOS 550D   EOS 600D   EOS 60D   EOS 60Da   EOS 650D   EOS 700D   EOS 70D   Kiss Digital   Canon Kiss F Digital   Kiss N   Kiss X2   Kiss X3   Kiss X4   Kiss X5   Kiss X50   Kiss X6   PowerShot G1 X   Canon PowerShot G10   PowerShot G11   PowerShot G12   PowerShot G15   PowerShot SX50 HS   Rebel SL1   Rebel T1i   Rebel T2i   Rebel T3   Rebel T3i   Rebel T4i   Rebel T5i   XS   Rebel XSi   Rebel XT   Rebel XTi   <b>Contax</b> 645   N   N Digital   N1   NX   <b>FujiFilm</b> X-E1 <b>Hasselblad</b> H   H3D   H4D-200MS   H4D-31   H4D-40   H4D-50   H4D-50MS   H4D-60   <b>Pentax</b> 645D   ist D   ist DL   ist DL2   ist DS   ist DS2   K-30   K-5   K-5 II   K-5 IIs   K-50   K-500   K-7   K-m   K10 Grand Prix   K100D   K100D Super   K10D   K110D   K200D   K20D   MZ-6   MZ-L   ZX-L   <b>Samsung</b> GX-1L   GX-1S   GX-20   NX-10   NX-100   NX-11   NX-5   <b>Sigma</b> SD1   SD1 Merrill   SD15
3C	<b>Canon</b> EOS 10D   EOS 1D   EOS 1D C   EOS 1D mk II   EOS 1D mk II N   EOS 1D mk III   EOS 1D mk IV   EOS 1D X   EOS 1Ds   EOS 1Ds mk2   EOS 1Ds mk3   EOS 20D   EOS 20Da   EOS 30D   EOS 40D   EOS 50D   EOS 5D   EOS 5D mk II   EOS 5D mk III   EOS 6D   EOS 7D   EOS D30   EOS D60   <b>Kodak</b> DSC-530
1N	<b>Nikon</b> D1   D1H   D1X   D2   D200   D2H   D2HS   D2X   D2XS   D3   D300   D300S   D3s   D3X   D4   D700   D800   D800 E <b>FujiFilm</b> S3 Pro   S5 Pro   Kodak DCS Pro 14n
2N	<b>Nikon</b> D70S   80
1S	<b>Minolta</b> DiMAGE 5   DiMAGE 7   DiMAGE 7Hi   DiMAGE 7i   DiMAGE A1   DiMAGE A2   DiMAGE A200   Dynax 3   Dynax 4   Dynax 5000   Dynax 500si   Dynax 505si   Dynax 5D   Dynax 7   Dynax 7000   Dynax 7D   Dynax 9   Dynax 9000   Dynax Sweets   Maxxum 3   Maxxum 4   Maxxum 5000   Maxxum 500si   Maxxum 505si   Maxxum 5D   Maxxum 600si   Maxxum 7   Maxxum 7000   Maxxum 700si   Maxxum 7D   Maxxum 807si   Maxxum 9   Maxxum 9000   <b>Sony</b> A100   A200   A300   A33   A35   A350   A37   A400   A450   A500   A55   A550   A550V   A560   A57   A580   A65   A65V   A700   A77   A77V   A850   A900   A99   A7
3N	<b>Nikon</b> D3100   D3200   D5000   D5100   D5200   D600   D7000   D7100   D90
3L	<b>Olympus</b> E-100 RS   E-30   E-400   E-410   E-420   E-450   E-510   E-520   E-600   E-620   Evolt E-410   Evolt E-510   OM-D E-M5   PEN E-P1   PEN E-P2   PEN E-P3   PEN E-P5   PEN E-PL2   PEN E-PL3   PEN E-PL5   PEN E-PM1   PEN E-PM2   SP-550   SP-560   SP-570   XZ-1   XZ-2   XZ-2 iHS
1P	<b>Leica</b> DigiLux 2   DigiLux 3   V-Lux 1   V-Lux 2   V-Lux 3   <b>Panasonic</b> FT 2   FZ100   FZ15   FZ150   FZ20   FZ200   FZ30   FZ50   G1   G10   G2   G3   G5   GF1   GH1   GH2   GH3   GX1   GX7 L1   L10   LC1   TS2
IR Emitter	<b>Sony</b> NEX-5T   NEX-6   NEX-7 Compatibility also extends to some other mirrorless cameras.
Mini USB	Some cameras maybe compatible via standard USB check with your camera manufacturer if it maybe triggered through this interface.