

LASER[®]

Tyre Valve Core Torque Tool



Description

For removing and installing valve cores. The tool is set to 4 Inch/Lbs (0.45 Nm) and prevents incorrect torque being applied to TPMS valves with sensors

Additional Information

- For removing and installing valve cores
- Prevents incorrect torque being applied to TPMS valves with sensors
- Tool is set to 4 Inch/lbs (0.45Nm)
- Specialist tool
- Time saver